ارتباط پایدار یکتا

ارائه دهنده راهکارهای ارتباطی و شبکه

User Manual

Ver: 1.0

Quick guide by Ertebat Paydar Yekta co :

1.connect the flash to pc , Press key button on flash

2.enter the password on the keypad on the flash (default password : 111111)

3.Press again the key button on flash

4.the unlock led is red and the flash is unclock

Product View

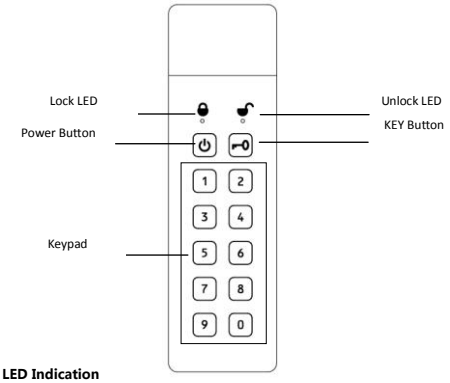

LED Indication

LED	Indication	Instructions
	Blue	Key is locked
	Red	Key is unlocked, can transfer data
	Blink 1 time	Inputting the user password
	Blink	Data is being transferred
	Blue	Accepting user password
	Blink	

Product	USB2.0 Secure Flash Drive
Material	Aluminum Case with Silicon key
Mode	Flash Drive
Features	Tough design for Dust and water resistant Secure PIN Access with keypad Real-time 256-bit AES Hardware Encryption Software Free Design Wear Resistant Keypad Drive Reset Feature
Comments	Encryption: AES Cipher-Block Chained mode Encryption Keys: 256-bit Hardware Hashing: 256-bit SHA
OS Requirement	Windows 2000 / XP / Vista / Win7/Win8 Mac OS 10.2 or higher Linux 2.4.2 or higher (such as Ubuntu、Android…)
Environment	Operating Temperature: 5℃ ~ 40℃ Operating Humidity: 20%RH ~ 80%RH Storage Temperature: -20℃ ~ 70℃ Storage Humidity: 10%RH ~ 90%RH
Capacity	8GB/16GB/32GB/64GB
Interface	USB2.0
Power Supply	USB Bus Power 5V/500mA
Size	8cm x 2.2cm x 0.7cm

Change password

A user password can be changed to almost any number that is desired. To create your new password be sure to follow the instructions below

1. The new password is 6 digits long.

2. The default user password is 111111. We recommend that you change the user password immediately for security reasons.

Step	Indication
1. Connected the key into the computer	will be on Blue
2. Double press the Key button 2 second。	ill be on Blue will blink Red
3. Input the old password	ill blink Blue
4. Press the Key buttor to confirm the old password	will blink Red
5. Input a new password	will blink Blue will blink Red
6. Press the Key buttor to confirm the new password	will blink Red
7. Input the new password again	will blink Blue will blink Red
8. Press the Key button complete the new password	OFF will be on Red

Note:

If a mistake is made when inputting the password, Please repeat the above operation。

Format Flash key

When first use, You will need to initialize and format the Flash key

1. Setup a new password

2. Connect the Flash key to the compute and Unlock it.

3. Right-click "My Computer" and then click Manage from the Windows desktop.

5. In the Computer Manage window, click Disk Management.

6. Right-click Removable Raw drive, in the blank area under the Unallocated section, and then select Format.

7. The Format window opens and Select FAT32 of NFTS depending on your needs and click OK

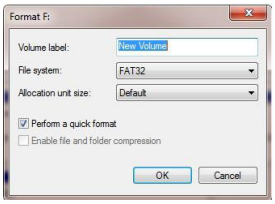

Unlock the Flash key :

Step	Indication
1. Connected the key into the computer	will be on Blue
2. Press the Key button	
3. Accepting user password (The default password is 111111)	ill be on Blue will blink Red
4. Input user password	ill blink Blue
5. Press the Key button	OFF will blink Red 1 time
6. When input the correct password, you can transfer data now.	OFF will be on Red

Lock the Flash key :

Step	Indication
1. To lock the Flash key, unplug it from the USB port.	
2. or press the key button on the unlocking mode	ill be on Blue FF

Reset the Flash key

If you forget your password, or If you would like to delete all data storaged on the Flash key and setup one new password, follow the instruction below.

The reset process will clear your password and destroy all data. This means a new User password will have to be defined in order to re-enable the Key. Also, since this will force the creation of a new encryption Key, the Flash key will have to be reformatted.

Step	Indication
1. Connected the key into the computer	will be on Blue
2. Press and hold the Key button And the number 9 button for 5 seconds	OFF will blink Red
3. Press the number 0 button to reset the Flash key (The default password is 111111)	nd blink together 1 seconds, then will turn off.
4. Unplug the key , and re-connect the key into the computer.	

Note:

By resetting the Flash key, all data previously stored on the drive will be lost! Please backup all your data first before do it!

FAQs

Q: If forget the password, How about the data on the Flash Key?

A: If you forget the password, there is absolutely no way of gaining access to the data stored on the Key.

You must be completely reset the Flash Key. By resetting, all data stored on the Key will be inaccessible.

When the Flash Key is reset the following occurs:

* The user password is deleted and restore to the default password.
* All the data on the Key is no longer accessible
* A new user password will need to be set
* The Flash key will need to be formatted